

Mapleshade

MIKRO-SMOOTH OWNER'S MANUAL

PERFORMANCE AND DESIGN

**Removes jitter-induced harshness. Sharpens video images and colors.
Fixes scratches.**

Micro-ceramics used by DoD for precision optics make possible this ultra-fine polish for CDs SACDs and DVDs. Significantly reduces optical jitter by flattening the disc's micro-roughness. From deepest bass to highest treble, Mikro-Smooth clarifies musical transients and enriches harmonic detail. Can not harm CDs/DVDs.

INSTRUCTIONS

Place disc label-side down on a flat, *clean* piece of paper (grit under CD can ruin it!). Shake bottle; apply two drops. Using special pad, polish hard for 30-60 seconds (harder is better; longer doesn't help). Rinse off under lukewarm tap water while lightly brushing off white residue with fingertips. Pat dry with tissue.

Keep pads (once dry) in sealed container to keep out airborne grit (which will cause faint scratches that do not affect sound). Pad can be washed out with dish detergent.

Mikro-Smooth contains only ultra-fine, inert ceramic particles and distilled water; it cannot chemically cause damage to discs.